

Quick Start

ATMe

Installation

- Connect the gas inlet to a gas bottle equipped with a regulator. The gas inlet is an Oxygen Adaptor (9/16-18 R.H).
- Connect the data wiring (Male XLR-5 connector for DMX/RDM) if you are using a DMX or RDM controller.
- Connect the power cord 100-250 VAC, 50/60 Hz, 715W.
- Open the gas bottle (CO₂ or N₂ industrial grade, over 99% of purity), and set the regulator pressure between 50 and 60 psi (3.5 and 4.1 bar, or 350 and 410 kPa).
- Fill the reservoir with **MDG Neutral Fog Fluid.**

Power on the MDG ATMe.

Working with the keyboard (LOCAL Mode)

- Verify the communication mode in the «INTERFACE
 COMM. ». When the «AUTO» mode is activated, the MDG
 ATMe is then controlled by DMX, only if there is a signal. If the DMX wire is unplugged, the control remains local.
- When the generator is manually switched to **«UNIT ON»** mode («CONTROL ► UNIT ► ON»), the program starts the heating cycle for approximately 8 minutes («STATUS ► STATE = % HEAT»).

When the temperature reaches operating level, the Automatic Purging System[™] (APS[™]) will be initiated («STATUS ► STATE = PURGE»).


After the first purging cycle is completed (1 min), the generator is ready to produce haze («STATUS > STATE = READY»).

 To produce Haze, switch the generator to «HAZE ON» mode («CONTROL ► HAZE ► ON»). The MDG ATMe will start to produce a haze after 10 to 30 seconds. Haze emission can be controlled by adjusting the working pressure of the internal reservoir («CONTROL ► PRESSURE»).

The MDG **ATMe** will produce haze as long as the control parameters are within specifications, the fog fluid reservoir filled and the gas bottles pressurized.

If a critical problem occurs, the fog generator <u>automatically shuts down</u>, and displays an error message in the **Status Menu**. The most common errors are (see manual for details):

- ERROR = P. LOW Gas bottle is probably closed, empty or not connected.
- ERROR = P. HIGH The input gas pressure is too high (Pressure between 50-60 psi / 3.5-4.1 bar / 350-410 kPa).
- ERROR = HEATER Check the AC voltage
- ERROR = PCB HIGH Move the generator to a colder location.

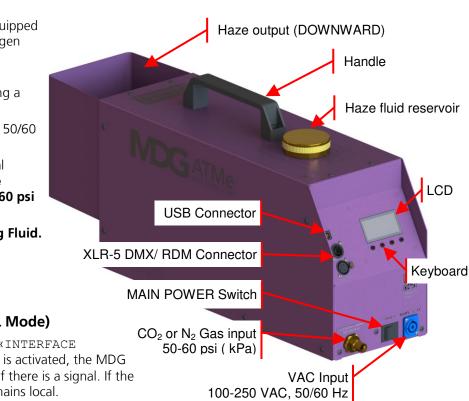

Working with DMX/RDM Control (DMX Mode)

- Connect a DMX line to DMX In connector (Male XLR-5 connector).
- Select the communication mode in the «INTERFACE → COMM. ». When the «AUTO» mode is activated, the MDG *ATMe* is then controlled by DMX, only if there is a DMX signal.
- Set the DMX Start Address in the Interface Menu («INTERFACE ► COMM. ► DMX ADDR»), and choose any value between 1 and 510 (512, last DMX channel).


The DMX Start Address can be reassigned via a RDM control.


The Interface uses three (3) DMX channels:

Channel 1	0 (0%)	<	UNIT OFF	\leq	128 (50%)	
	128 (50%)	<	UNIT ON	\leq	255 (100%)	
Channel 2	0 (0%) – 255 (100%), HAZE OUTPUT (from minimum to maximum)					
Channel 3	0 (0%)	<	HAZE OFF	\leq	128 (50%)	
	128 (50%)	<	HAZE ON	\leq	255 (100%)	

Technical Specifications

-				
Total Running Time:	23 hours at 2.76 bar / 40 psi			
	46 hours at 1.38 bar / 20 psi			
Fluid consumption:	100 ml (3.24 oz / 0.029 US gal) per hour at 2.76 bar / 40 psi			
	55 ml (1.62 oz / 0.0145 US gal) per hour at 1.38 bar / 20 psi			
Fluid type:	MDG Neutral[™] Fog Fluid ONLY			
	M.S.D.S. available on request			
Fluid reservoir:	2,5 l (0.66 US gal) bottle			
Gas type:	Industrial Grade CO ₂ or N ₂			
Gas pressure input:	4.15 bar / 60 psi max			
Gas consumption:	0.36 kg (0.79 lb) per hour at 2.76 bar / 40 psi			
	0.18 kg (0.4 lb) per hour at 1.38 bar / 20 psi			
Operating voltage:	100-250 VAC, 50/60Hz, 1 phase, 715 W			
	Ground / Earth connection REQUIRED			
Noise emission (at 1 m/3.3 ft)	45 dB Theater Mode Off			
Operating temperature:	0 °C to 50 °C (32 °F to 122 °F)			
Operating humidity:	90 % relative humidity @ 50 °C (122 °F), non-condensing			
Storage temperature:	-40 °C (-40 °F) to 60 °C (140 °F)			
Storage humidity:	80% relative humidity @ 60 °C (140 °F)			
Approval	CE, CSA and UL pending			
Dimensions	30 cm (12") H x 18 cm (7") W x 68,5 cm (27") L			
Weight:	16.8 kg (37 lb)			

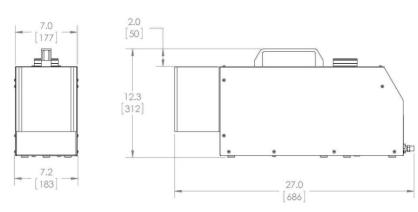

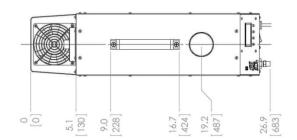

... For further details, please read the User Guide.